


DIGITAL PROJECTOR HOOKUP

If you had a projector installed, you should have the four cables shown in this picture.

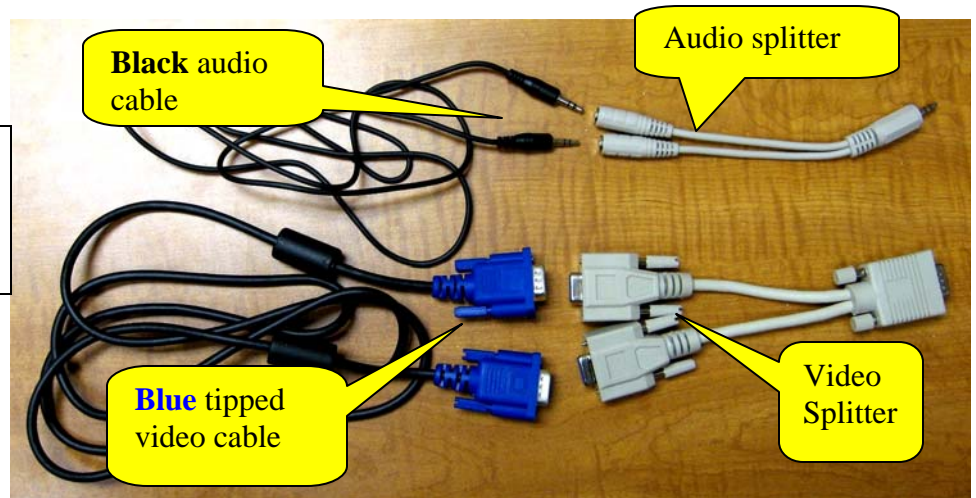


Cables should be hooked up as per the following pictures.

Note: It is OK to hook up the cables yourself as per the pictures.

The **BLUE tipped video cable** should be connected to **COMPUTER** on the wall plate.

The **BLACK audio cable** should be connected to **AUDIO** on the wall plate.

The **Yellow, White & Red** cables are for the **television and VHS A/V** connections which allow you to view cable TV and VHS tapes from your projector.

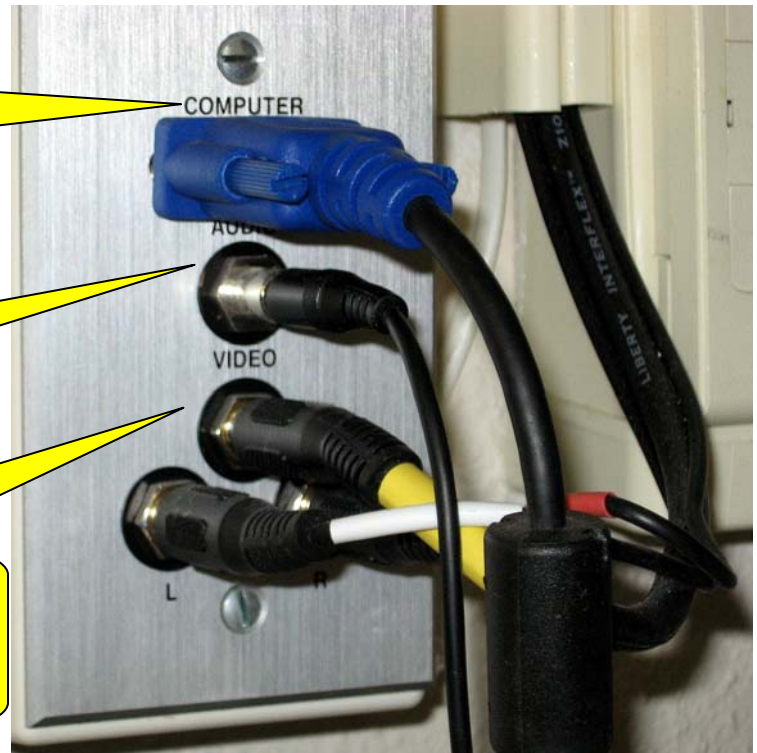


BLACK audio cable, (from the wall) is connected to the audio splitter.

The **GREEN** tipped computer speaker cable is connected to **audio**

The **BLUE** computer monitor cable is connected to the video splitter.

The other end of the **BLUE tipped video cable** (from the wall plate) is also connected to the video splitter.

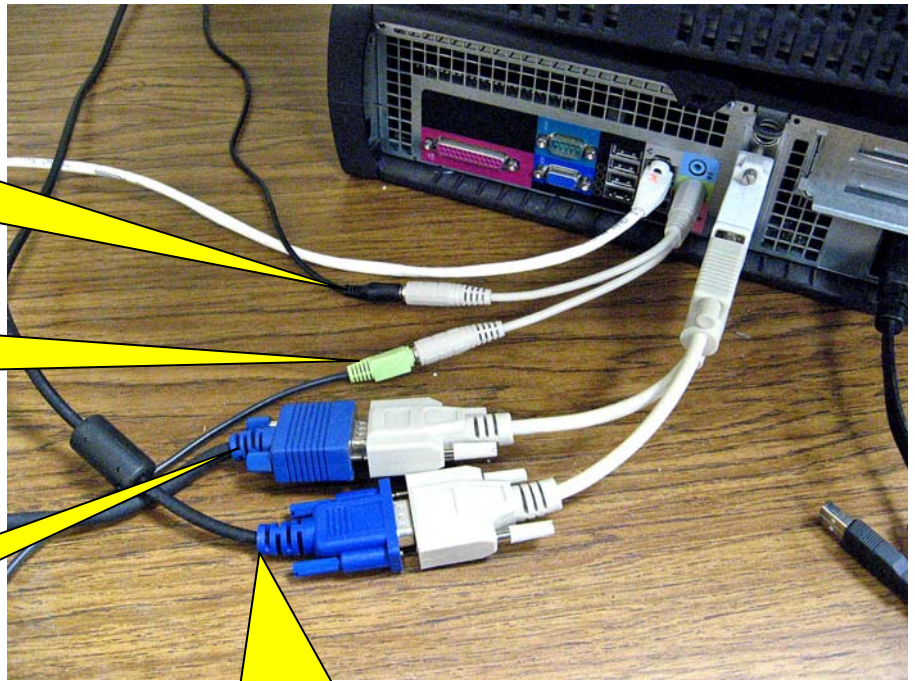

After you have checked the cable hookups, let me know if your projector is not working.