

 
The Epson Projector Remote

The following are a few features on the Epson remote control.

- A. Power button: turns the projector On/Off.
- B. Source Search button: switches between TV and external video sources connected to the projector only.



- C. Volume (Vol-, Vol+) buttons: adjusts the volume for the projector from 0 to 20 when the TV Tuner Box is not being used.



- D. E-Zoom (+/-): used to zoom in or out of an area of the screen.



- E. A/V Mute: Blacks out the video signal and mutes audio of anything being projected.

