


Remote Key TV Mode Functions

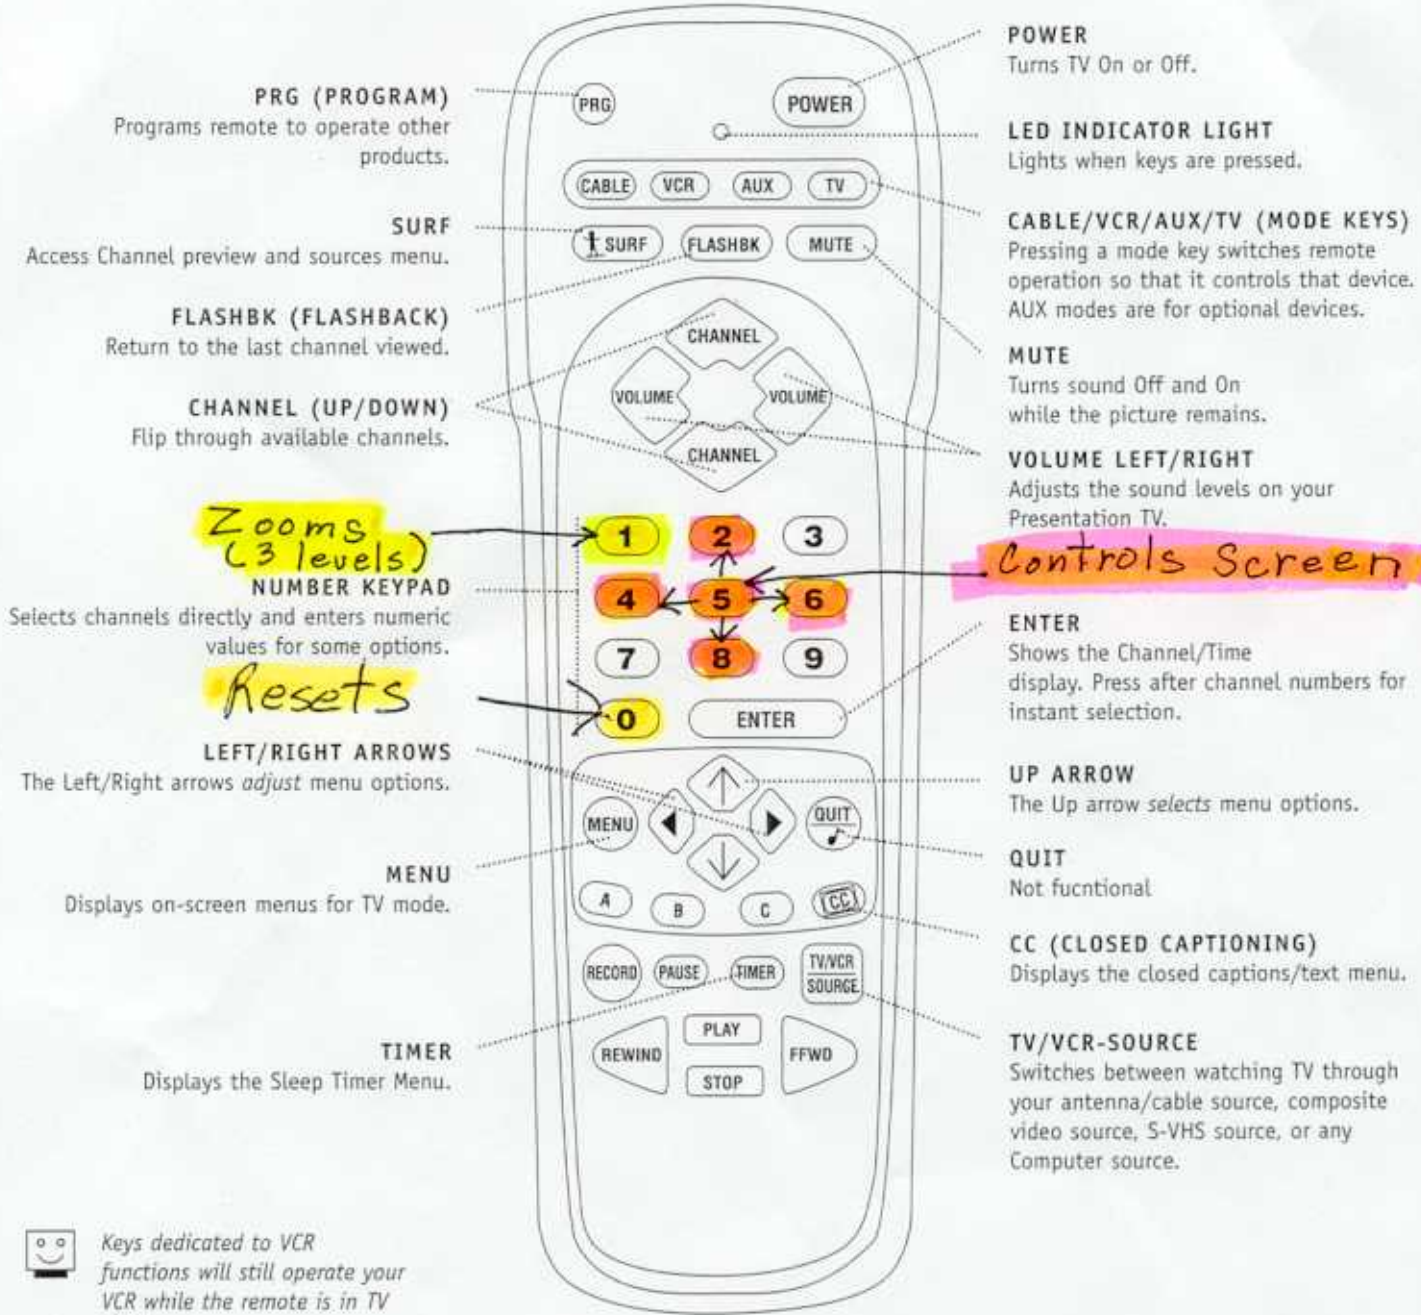

Zooms (3 levels)

Controls Screen

Resets

Keys dedicated to VCR functions will still operate your VCR while the remote is in TV mode.

The DOWN arrow key is reserved for FM/TV on other models.

remote control part number
MBR3447
124-233