



Northside ISD
6632 Bandera Road, Bld. D
San Antonio, TX 78238
Phone: (210) 706-8666
Fax: (210) 522-8167

"San Antonio's Premiere School System"

Advancing the Effective
Use of Technology in Education

NISD Technology Services

Phone Settings

Ringer Tone

1. Press the Services button.
2. Select Settings from the Services menu by using the Scroll Key or select "3" from the dial pad.
3. Select Ring Type from the Services menu by using the Scroll Key or select "2" from the dial pad..
4. Press Scroll Key to view the list of available ring types.
5. Press the Play soft key to hear a sample of the selected ring type.
6. Press the OK soft key to accept your changes.
7. Press the Exit soft key to exit the Settings and Service Menus.



Ringer Volume

1. While the phone is in its cradle, press the Up or Down arrows on the Volume button.
2. Continue to press the Volume button to adjust the volume to the desired level. This setting is automatically saved.

Headset Volume

1. Hold the receiver to your ear, press the Volume Control button up or down.
2. This setting will automatically be saved.

LCD Screen Contrast

1. Press the Services button .
2. Select Settings from the Services menu by using the Scroll Key or select "3" from the dial pad..
3. Select Contrast from the Services menu by using the Scroll Key or select "1" from the dial pad. .
4. Press the Up or Down soft keys to set the desired display contrast.
5. Press the OK soft key to accept your changes.
6. Press the Exit soft key to exit the Settings and Service Menus.